

## Ink

The Ink for the TekGun is permanent and should not be in contact with anything you do not want to permanently mark. When the ink runs out of the ink cartridge, dispose of the cartridge and replace with new cartridge.

### Order More Ink Cartridges

Visit [www.tekgun.com](http://www.tekgun.com) to order more ink cartridges in either black or white ink.

**TEKGUN**  
CABLE LABELER

TekGun, LLC  
13000 Gregg Street  
Poway, CA 92064 USA  
1.888.4TEKGUN (1.888.483.5486)  
[www.TekGun.com](http://www.TekGun.com)

## Marking Text



Once the text info you want to print is chosen, the ink cartridge is installed in the front of the gun, and the die size selected, you are now ready to print on cable. Holding the gun with one hand place the cable you want to print on into the gun making sure the cable is lined up with the support die. Squeeze the handle shut. Release the handle so there is no pressure on the cable, and to assure the rubber belts are not making contact with the cable. Then pull the cable through the gun 18" to 24" and squeeze the handle again.



*\*TekGun LLC. Recommends that you print your numbers on the cables 2 to 3 times to assure readability*

## Pen

The TekGun is designed to hold a "Sharpie" brand pen for marking your boxes of cable with the cable numbers. You can hold the pen in the slot by pushing it from the front of the gun to the back. To remove the pen pull the pen out the opposite way. The Sharpie pen is not included with the purchase of the TekGun.

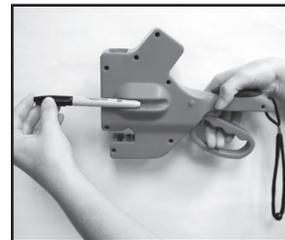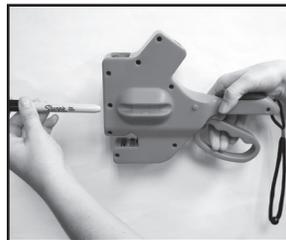

**TEKGUN**  
CABLE LABELER

Owners Manual and Warranty Information

TekGun, LLC  
13000 Gregg Street  
Poway, CA 92064 USA  
1.888.4TEKGUN (1.888.483.5486)  
[www.TekGun.com](http://www.TekGun.com)

## Installing an Ink Cartridge

Remove ink cartridge from foil rapper and plastic case. Remove black plastic cover exposing the ink cartridge. Using the arrows to line up the cartridge, install the cartridge in the front of the gun until it snaps into place.




## Storing an Ink Cartridge

If the gun is unused for any period of time (over 30 minutes), it is recommended that you move the ink cartridge from the front of the gun to the top storage area. This will help preserve the ink and keep it from drying out as quickly. Use the black arrows on the ink cartridge and the gun to line them up and snap the cartridge into place. When you are ready to start using the gun again push down on the tab to remove the cartridge from the storage area and reinstall it into the front of the gun.



## Adjust Text And Numbers

Looking through the clear view window you can see the numbers and letters you want to mark on your cable. Start by pushing the dial on the side all the way into the gun and adjusting the belt all the way on the left. After you dial the letter or number you want you can pull the knob out one click at a time adjusting the next belt until the desired series of numbers have been selected. The belt consists of two colors (white and black).

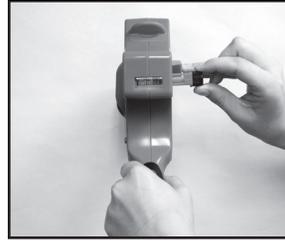

Do not force the belt past the stopper. The white belt with the black characters must always be in the viewing window.

*\*Make sure you push the knob all the way back into the gun before attempting to make a mark on any cable as the knob and shaft will make contact with the gun body when the handle is squeezed, possibly resulting in the shaft breaking off. The warranty will be void if the selector mechanism is damaged from trying to print without pushing the knob back into the TekGun.*

## Adjust For Wire Size

The TekGun has three wire support dies: NM, round wire from 3 to 8 mm, and round wire from 9 to 15 mm. You select these dies by pulling out the knob and turning the knob until the die you want is facing up. Release the knob and the



die will lock into shape. The size range is only a guideline and you can use the die that works best for your cable size and shape.

*Instructions continued. See Marking Text on reverse side.*

## Warranty

**TekGun LLC. Will warranty this product for the period of one year from the date of purchase.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity, sand, dirt or the like, extreme heat, subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of TekGun LLC, are excluded from coverage.

## Warranty Registration

Fill in your information below and mail, along with your receipt, to the address below.

Warranty registration needs to be to be mailed within 30 days of purchase for warranty to be valid.

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip Code \_\_\_\_\_

Day Phone \_\_\_\_\_

Email \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Place of Purchase \_\_\_\_\_

TekGun, LLC  
13000 Gregg Street  
Poway, CA 92064 USA  
1.888.4TEKGUN (1.888.483.5486)  
www.TekGun.com